

HearthRite

Radiant and Blue Flame
Vent-Free Gas Heaters



**Radiant Vent-Free
Gas Heater**

**Blue Flame Vent-Free
Gas Heater**



Intelligent Design • Exceptional Value

Radiant Heat



Think *cat on a windowsill!* Our radiant heaters project warmth into the room like sunlight through a window. Ideal for any supplemental heat application.

Blue Flame Heat

Think *warm tropical breeze!* Our blue flame heaters warm the air, which rises to create natural circulation in the room.



Choose manual or thermostat control



Blower



Floor Stand

- 99.9% efficiency – turns more gas into heat
- Available in LP or Natural gas
- Pushbutton piezo ignition and standing pilot
- Heats even when electric power fails
- Oxygen Depletion Sensor shuts off heater before oxygen drops to unsafe levels
- Every heater is test-fired at the factory to check Oxygen Depletion Sensor
- Wall-mount or floor stand
- Three-year limited warranty on parts and labor
- Imported for Empire from China

Radiant Gas Heaters

| Model | Btu | Natural/LP | Controls | Dimensions (H x W x D) | Weight (lb) |
|--------|--------|------------|--------------------|------------------------|-------------|
| HR06MN | 6,000 | Nat | Manual, on/off | 19 1/4 x 14 1/4 x 7 | 12 |
| HR06ML | 6,000 | LP | Manual, on/off | 19 1/4 x 14 1/4 x 7 | 12 |
| HR10MN | 10,000 | Nat | Manual, 2-Settings | 19 1/4 x 14 1/4 x 7 | 13 |
| HR10ML | 10,000 | LP | Manual, 2-Settings | 19 1/4 x 14 1/4 x 7 | 13 |
| HR18MN | 18,000 | Nat | Manual, 3-Settings | 23 1/4 x 19 1/4 x 8 | 23 |
| HR15ML | 15,000 | LP | Manual, 3-Settings | 23 1/4 x 19 1/4 x 8 | 23 |
| HR30MN | 30,000 | Nat | Manual, 3-Settings | 23 1/4 x 26 3/4 x 8 | 30 |
| HR25ML | 25,000 | LP | Manual, 3-Settings | 23 1/4 x 26 3/4 x 8 | 30 |
| HR10TN | 10,000 | Nat | Thermostat | 19 1/4 x 14 1/4 x 7 | 13 |
| HR10TL | 10,000 | LP | Thermostat | 19 1/4 x 14 1/4 x 7 | 13 |
| HR18TN | 18,000 | Nat | Thermostat | 23 1/4 x 19 1/4 x 8 | 24 |
| HR15TL | 15,000 | LP | Thermostat | 23 1/4 x 19 1/4 x 8 | 24 |
| HR30TN | 30,000 | Nat | Thermostat | 23 1/4 x 26 3/4 x 8 | 31 |
| HR25TL | 25,000 | LP | Thermostat | 23 1/4 x 26 3/4 x 8 | 31 |

Blue Flame Gas Heaters

| Model | Btu | Natural/LP | Controls | Dimensions (H x W x D) | Weight (lb) |
|--------|--------|------------|-------------------|------------------------|-------------|
| HB06MN | 6,000 | Nat | Manual, on/off | 19 1/4 x 14 1/4 x 7 | 12 |
| HB06ML | 6,000 | LP | Manual, on/off | 19 1/4 x 14 1/4 x 7 | 12 |
| HB10MN | 10,000 | Nat | Manual 2-Settings | 19 1/4 x 14 1/4 x 7 | 13 |
| HB10ML | 10,000 | LP | Manual 2-Settings | 19 1/4 x 14 1/4 x 7 | 13 |
| HB20MN | 20,000 | Nat | Manual 3-Settings | 23 1/4 x 19 3/4 x 8 | 21 |
| HB20ML | 20,000 | LP | Manual 3-Settings | 23 1/4 x 19 3/4 x 8 | 21 |
| HB30MN | 30,000 | Nat | Manual 3-Settings | 23 1/4 x 26 3/4 x 8 | 26 |
| HB30ML | 30,000 | LP | Manual 3-Settings | 23 1/4 x 26 3/4 x 8 | 26 |
| HB10TN | 10,000 | Nat | Thermostat | 19 1/4 x 14 1/4 x 7 | 14 |
| HB10TL | 10,000 | LP | Thermostat | 19 1/4 x 14 1/4 x 7 | 14 |
| HB20TN | 20,000 | Nat | Thermostat | 23 1/4 x 19 1/4 x 8 | 23 |
| HB20TL | 20,000 | LP | Thermostat | 23 1/4 x 19 1/4 x 8 | 23 |
| HB30TN | 30,000 | Nat | Thermostat | 23 1/4 x 26 3/4 x 8 | 33 |
| HB30TL | 30,000 | LP | Thermostat | 23 1/4 x 26 3/4 x 8 | 33 |

Accessories

| | | | |
|-------|--|-------|--|
| HAB01 | Blower – Thermostat and Manual Control | HAS04 | Floor Stand for HR06/HB06 and HR10/HB10 Models |
| | | HAS03 | Floor Stand for HR15/HR18, HR25/HB20, and HR30/HB30 Models |

Warranty

All Parts carry a 3-year limited warranty with a 3-year limited labor warranty.

HearthRite is committed to continuous product improvement. Specifications are subject to change without notice.

Empire Comfort Systems is committed to continuous product improvement; specifications are subject to change without notice. Flame size, shape, and color will vary from photos.

Due to high temperatures, the appliance should be located out of traffic and away from furniture and draperies.

Children and adults should be alerted to the hazard of high surface temperature and should be kept away to avoid burns or clothing ignition.

Installation and repair should be done by a qualified service person.

When used without adequate combustion and ventilation air, heater may give off CARBON MONOXIDE, an odorless, poisonous gas.

These heaters have a pilot light safety system that turns the heater off if not enough fresh air is available. Do not tamper with this safety system. If the heater shuts off, do not re-light until you provide fresh air. If the heater keeps shutting off, have it serviced. Keep the burner and control compartment clean.

Carbon monoxide poisoning may lead to death. Early signs of carbon monoxide poisoning resemble the flu, with headache, dizziness, and/or nausea. If you have these signs, the heater may not be working properly. Get fresh air at once and have the heater serviced.

Some people—pregnant women, persons with heart or lung disease, anemia, those under the influence of alcohol, those at high altitudes—are more affected by carbon monoxide than others.

These heaters are design certified in accordance with American National Standards Institute Z21.11.2a (latest standard) by the Canadian Standards Association as Unvented Room Heaters.

The installation must conform to local codes. In the absence of local codes, the installation must conform with American National Standard (National Fuel Gas Code) known as NFPA 54 and ANSI Z223.1 (latest edition) available from the American National Standards Institute, Inc., 11 West 42nd St., New York, N.Y. 10036, or from the National Fire Protection Association, Batterymarch Park, Quincy, Massachusetts 02269.

HearthRite

A Division of Empire Comfort Systems Inc.
918 Freeburg Avenue
Belleville, IL 62220
info@empirecomfort.com

